

RubberEasy™


Peel & Stick EPDM

INSTALLATION INSTRUCTIONS

SAFETY & PRECAUTIONS


- Use standard protective equipment, including gloves.
- Follow safety guidelines for working at heights.
- Avoid installation during rain, fog, snow, or temperatures below 5°C.
- When using EasySealant, allow it to cure before applying any tension (min. 48 H)

REQUIRED MATERIAL

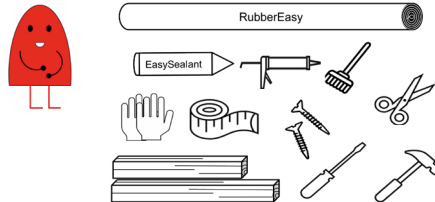


RECOMMENDED QUANTITIES


- RubberEasy membrane: roof width + 20 cm, roof length + 20 cm
- For membrane junctions (if applicable): additional 5 cm for membrane overlap
- EasySealant: 6 m per cartridge

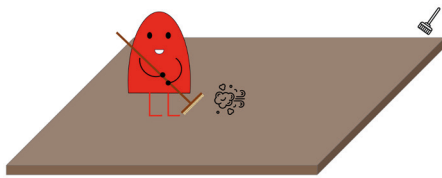


1. Ensure the roof deck is smooth, clean, dry and sturdy. Suitable substrates include wood, OSB, CTBH and metal. In renovations, remove first the old roofing and damaged substrate. Replace or apply a new OSB board as needed. Fill voids greater than 5 mm wide.

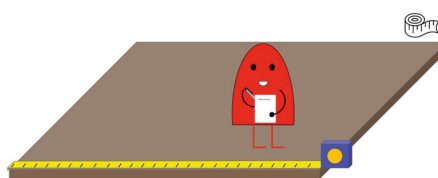


2. Measure the roof accurately. Add 20 cm to both the width and length for proper coverage. Plan for an extra 5 cm seam overlap between adjacent membrane sections.

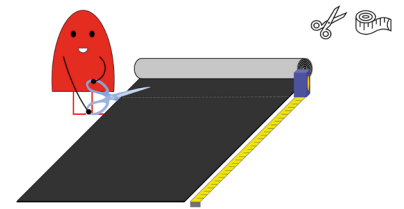


3. Unroll and cut the RubberEasy membrane to the required size on a hard, flat, clean surface. Use a sharp cutter and a straight plank or a pair of scissors. Let the membrane to relax for 30 minutes.

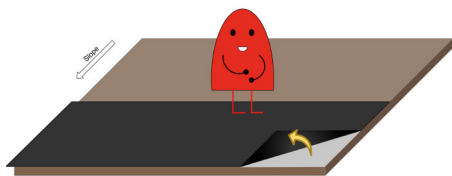


4. Position the RubberEasy membrane on the roof, starting from the lower end, with its textured surface facing up. Leave 100 mm to extend beyond the lower edge and sides. Fold half of the panel and peel off the release liner to expose a triangular adhesive area on one side.

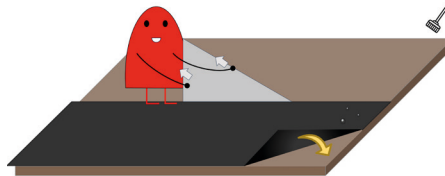


5. Carefully adhere the exposed adhesive triangle to the roof, then gradually peel off the release liner at a 45° angle. Next, eliminate trapped air using a soft broom, starting from the center and moving outward for full contact between the RubberEasy membrane and the roof.

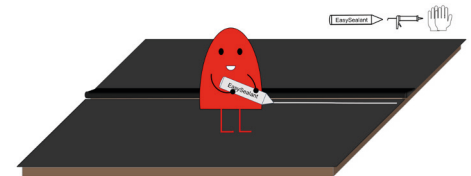

6. Repeat the process to cover the entire area. The upper membrane should overlap the lower one by 50 mm. Before contact, apply a 6 mm thick bead of EasySealant, approximately 10 mm from the overlap edge under the top membrane.

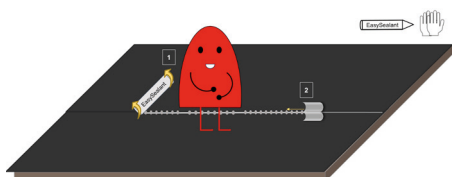

7. Gently roll a cartridge over the overlap, allowing the EasySealant to extrude. Immediately after, use a folded membrane release liner side to spread the EasySealant evenly along the membrane edge.

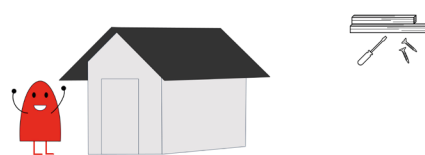

8. For corners, create a fold (pig-ear). Secure corners and excess membrane at roof edge with wood or plastic battens. Reinstall timber fixing strips around the perimeter.



Scan the QR code to watch the RubberEasy installation video.